



9846961



DK

Betjeningsvejledning

**Vigtigt: Læs denne vejledning
før produktet tages i brug.**

UK

Instruction manual

**Important: Please read this
user manual before operating
the product**



Læs alle instruktioner omhyggeligt, inden du bruger apparatet, og opbevar denne manual til senere brug.

ADVARSEL

Dette apparat er kun beregnet til husholdningsbrug og bør ikke bruges til andet formål eller til anden anvendelse, f.eks. til ikke-husholdningsbrug eller i et kommersIELT miljø.

Dette apparat kan bruges af børn i alderen fra 8 år og derover og personer med nedsat fysisk, sensorisk eller mental kapacitet eller manglende erfaring og viden, hvis de har fået vejledning eller instruktion om brug af apparatet på en sikker måde og forstår farerne involveret. Børn må ikke lege med apparatet. Rengøring og vedligeholdelse af brugerens må ikke foretages af børn uden tilsyn.

Hvis strømkablet er beskadiget, skal det udskiftes af fabrikanten, dennes serviceagent eller en lignende kvalificeret person, så faremomenter undgås.

For detaljer omkring rengøringsmetode og hyppighed, se afsnittet "Rengøring og vedligeholdelse" på side 8

Ved bortskaffelse af apparatet:

For at forhindre eventuelle skader på miljøet eller sundhedsfare ved uhensigtsmæssig bortskaffelse, skal produktet genanvendes på en ansvarlig måde for at fremme bæredygtig genbrug af anvendelige materialer. Bortskaffelse bør kun ske hos offentlige indsamlingssteder; Kontakt affaldsbehandlingscentret nærmest dit hjem for at få flere oplysninger om de korrekte procedurer for bortskaffelse.

Ved installation, service:

Apparatet skal placeres på et vandret gulv og hold ventilationen frit. Forsøg ikke at udskifte eller reparere komponenter selv, spørg serviceagenten om hjælp om nødvendigt.

Ved håndtering:

Håndter altid apparatet for at undgå skader.


Mængden udtrykt i vægt og i CO₂ af fluorerede drivhusgasser, som apparatet er designet til, og det globale opvarmningspotentiale for disse gasser er 3.

Fluorholdige drivhusgasser findes i hermetisk forseglet udstyr.

Apparatet indeholder fluorholdige drivhusgasser.

Gasens kemiske navn: R290

Efterlad mindst 30 cm plads øverst og på siderne af apparatet for korrekt luftcirkulation.

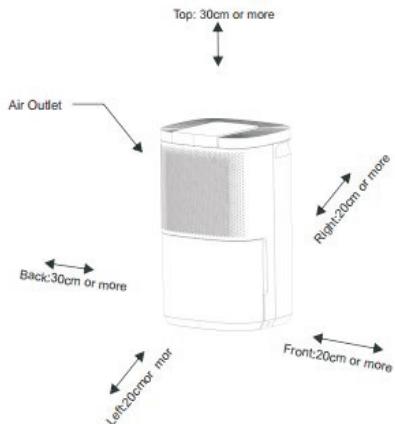


VIGTIGE SIKKERHEDSINSTRUKTIONER

- Affugteren er kun til indendørs brug.
- Brug eller opbevar ikke affugteren i direkte sollys.
- Installer din affugter på en stabil, plan overflade. Sørg for, at overfladen er stærk nok til at understøtte vægten af affugteren med en fuld vandtank.
- Du må ikke sidde eller stå på affugteren.
- Sluk for apparatet, og tag det ud af stikkontakten, når det ikke er i brug og før rengøring.
- Anbring ikke genstande på apparatet.
- Drik ikke eller brug vandet opsamlet i vandbeholderen.
- Brug ikke apparatet i nærheden af brandfarlig gas eller brændbare stoffer, såsom benzin, benzen, fortyndingsmidler osv.
- Fjern ikke vandbeholderen under drift.
- Anbring ikke aerosoler eller andre farlige materialer i nærheden. Anbring heller ikke brændbare materialer som benzin eller fortyndingsmidler i nærheden. Disse kan eksplodere og forårsage brand.
- Anbring ikke apparatet i nærheden af en varmekilde. Dette kan medføre, at plastikdelene indeni smelter og antænder.
- Brug kun apparatet på vandrette, stabile overflader.
- Anbring ikke nogen vandbeholder, såsom en vase, på apparatet. Vandspild kan forårsage isolationsfejl og elektrisk stød eller brand.
- Man må ikke læne sig op ad apparatet. Dette kan medføre, at det vælter, hvilket kan resultere i personskade.
- Undgå at forhindre luftindtag eller -udløb med tøj eller andet. Hindring af luftstrømmen vil medføre overophedning, funktionsfejl eller brand.
- Tøm altid vandtanken, før du flytter apparatet til opbevaring.

OVERSIGT

Set forfra

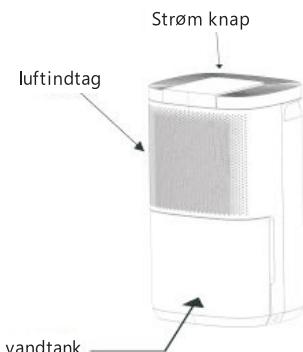

Set bagfra



DRIFT Sørg for, at vandtanken er korrekt monteret.

- Apparatet er egnet til brug i omgivelsestemperaturer fra 5 ° C til 32 ° C.
- Sørg for, at vandtanken er korrekt monteret.
- Tilslut ikke apparatet til en stikkontakt med flere stik.

BEMÆRK: Vær altid forsiktig, når du flytter apparatet, især når vandet kommer højere i tanken; jo højere vandet kommer i tanken, jo lettere er det for apparatet at vælte, når det flyttes. Det anbefales at tømme tanken, før du flytter apparatet.

Kontrolpanel



Knapper:



Tænd/sluk



Affugtningstilstand



Indstilling for blæserhastighed



Funktioner for tænd/sluk timer



Børnesikringsfunktion



Tænd/sluk funktion for blæser



Dvaletilstand

Signallamper:



Hr
Timer
tænd/
Timer sluk



%
Visning af relativ
luftfugtighedsprocent



Anti-frost
funktion



Tank fuld
eller ikke
på plads



Lav
blæserhastighed



Høj
blæserhastighed

Affugtningstilstand:



Normal



Kontinuerlig



Stærk



Tørretumbler

88

Display: For at vise det relative fugtighedsprocentniveau, den forsinkede start eller forsinket stoptid.

Tænd og sluk

1. Sæt apparatet i stikkontakten.

2. Tryk på  for at tænde for apparatet.

- Den røde indikatorlampe på knappen  lyser.
- Displayet viser det omgivende fugtighedsniveau.

3. Tryk på  igen for at slukke apparatet.

- Den røde indikatorlampe på knappen  vil slukke, og der er ikke noget display.

Indstilling af affugtningstilstand

Tryk gentagne gange på  for at vælge den ønskede affugtningstilstand.

- Den tilsvarende indikatorlampe blinker cirka 5 sekunder og holder derefter op med at blinke, hvilket indikerer, at den valgte affugtningstilstand er bekræftet.



Normal



Kontinuerlig



Stærk



Tørretumbler

Hvis du vælger **tørretumbler-tilstand**, lyser  indikatorlampen.

Ventilatorhastigheden er fast og kan ikke justeres. Fugtighedsniveauet styres automatisk i henhold til den omgivende fugtighed.

Tip til tørring af våde klude:

- Efterlad et mellemrum på 30-50 cm mellem luftudtaget og alt tøj.
- For at give en god luftstrøm skal du hænge det våde tøj op på line og efterlade plads mellem hvert tøj.
- Hæng vådt tykt tøj direkte foran luftudløbet. Den optimale tørreevne opnås muligvis ikke for tykt og tungt tøj.



Indstilling af fugtighedsniveau

I normal affugtningstilstand skal du gentagne gange trykke på "+" "-" for at indstille det krævede fugtighedsniveau. Fugtighedsniveauet kan indstilles inden for 30 % til 80 %.

- For tørrere luft indstilles fugtighedsniveauet til en lavere procentvis værdi.
- For spjældluft skal fugtighedsniveauet indstilles til en højere procentværdi.

Hver gang du trykker på "+" øges fugtighedsniveauet med 5 %. Når du har indstillet det ønskede fugtighedsniveau, viser displayet kort det indstillede fugtighedsniveau og vender derefter tilbage til det faktiske luftfugtighedsniveau.

Kontroller farven på status-indikatorlampen:

Luftfugtighedsniveau	Statusindikatorlampe
< 50 %	Blå
Mellem 50 % og 70 %	Grøn
> 70 %	Rød

Statusindikatorlampe



Indstilling af blæserhastighed

I normale affugtnings- og luftrensningstilstande skal du gentagne gange trykke på  for at vælge den ønskede blæserhastighed.

Den tilsvarende indikatorlampe lyser.



Indstilling af Timer

Sådan programmeres funktionen forsinket start:

1. Når apparatet er i standbytilstand, skal du trykke på .

- Indikatorlampen   og "00" blinker på displayet.

2. Mens "00" blinker, skal du gentagne gange trykke på eller trykke på og holde "+" "-" for at indstille de ønskede timer.

- Den forsinkede starttid ændres med trin på 1 time op til 24 timer.

3. Efter ca. 5 sekunder bekræftes den indstillede tid.

4. Når den indstillede tid er gået, begynder apparatet at arbejde.

Sådan programmeres funktionen forsinket stop:

1. Når apparatet er i drift, skal du trykke på .

- Indikatorlampen   og "00" blinker på displayet.

2. Mens "00" vises, skal du gentagne gange trykke på "+" "-" for at indstille de ønskede timer.

- Den forsinkede starttid ændres med trin på 1 time op til 24 timer.

3. Efter ca. 5 sekunder bekræftes den indstillede tid.

4. Når den indstillede tid er gået, stopper apparatet.

Sådan ændres eller annulleres timeren:

• Hvis du ønsker at ændre den indstillede forsinkede start- eller stoptid, skal du trykke på  en gang og derefter, mens timen blinker, gentagne gange

Tryk på "+" "-" indtil det ønskede tidspunkt er valgt.

• Hvis du ønsker at annullere timeren, skal du trykke to gange på , displayet viser "00". Efter ca. 5 sekunder, indikatorlampen   slukkes.

Børnesikring

1. For at aktivere børnesikringsfunktionen skal du trykke på og holde  i cirka 3-5 sekunder, og indikatorlampen på denne knap  lyser.

- Alle knapper deaktiveres.

2. For at deaktivere denne funktion skal du trykke på og holde nede  i cirka 3 sekunder, og indikatorlampen på denne knap  slukkes.

Tænd/sluk funktion for blæser

1. Tryk på  for at aktivere ventilatoren til/fra-funktion, og indikatorlampen på denne knap  lyser.

- Du kan indstille blæserhastigheden og timeren, når du aktiverer denne funktion, apparatet vil forlade affugtningsstilstanden.

2. For at deaktivere denne funktion skal du trykke på  og indikatorlampen på denne knap  slukkes.

Dvaletilstand

1. Tryk på  for at aktivere dvaletilstanden.

- Indikatorlampen på denne knap  lyser, men de andre oplyste indikatorlamper slukkes. Der vises ikke noget på displayet.
- Indikatorlampen  lyser fortsat, hvis vandtanken er fuld.
- Tryk på en vilkårlig knap for at vække displayet og indikatorlamperne. Efter ca. 5 sekunder går de i en dvaletilstand igen.

2. For at aktivere denne funktion skal du trykke på  og indikatorlampen på denne knap  slukkes.
• Fugtighedsniveauet vises, og indikatorlamperne lyser.

Afrimmningsfunktion

Apparatet afrimes automatisk, når omgivelsestemperaturen falder til under ca. 18 ° C.

Afrimningen starter og fungerer i en periode på 5 minutter hvert 25 minut.

- Under afrimning kan affugtnings- og luftrensningssystemerne intermittere.
- Tag ikke stikket ud eller sluk for apparatet, når apparatet afrimer.

FJERNELSE AF OPSAMLET VAND

Tømning af vandtanken:



Når vandtanken er fuld,  lyser indikatorlampen.

Statusindikatorlampen blinker rødt, mens du hører bip.

- Træk langsomt vandtanken ud.
 - Hold apparatet fast, og træk tanken ud ved håndtagene på begge sider af tanken, og pas på, at der ikke spildes vand.
- Hæld vandet ud.
- Skub vandtanken forsigtigt helt ind.
 - Undladelse af at skubbe tanken sikkert kan forårsage, at apparatet standser drift.
- Når tanken sættes tilbage, begynder apparatet at køre. Indikatorlampen  slukkes.
 - Statusindikatorlampen gendannes til den forrige farve, og den stopper med at bippe.


BEMÆRK: Drik aldrig vandet eller brug det til at vande planter.

Kontinuerlig dræning:

Hvis apparatet skal betjenes i længere perioder, men du ikke er i stand til at tømme tanken, anbefales det at bruge det kontinuerlige dræningsanlæg.

- Fjern gummiproppen.
- Fastgør den medfølgende slange til afløbet.
 - Sørg for, at slangen ikke er højere end udløbet, ellers forbliver vand tilbage i tanken.
 - Kontroller også, at slangen ikke er knækket.

BEMÆRK: Når det kontinuerlige dræningsanlæg ikke bruges, skal du fjerne slangen fra stikkontakten og sæt gummiproppen tilbage i drænudløbet.

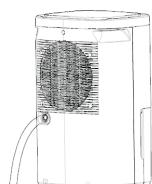

sammenhængende drænslange(Annex gift)

længde :30cm

indre diameter :17mm

ydre diameter :19mm



RENGØRING OG VEDLIGEHOLDELSE

- Sluk for apparatet og tag stikket ud af stikkontakten, før du udfører rengøring eller vedligeholdelse.
- Nedsvøm aldrig apparatet i vand.
- Rengør apparatets yderside med en let fugtig klud. Tør grundigt.
- Rengør vandbeholderen under rindende vand efter at have tømt den.
- Brug ikke noget kemisk eller slibende rengøringsmiddel.

Rengøring af filteret

Rengør filteret regelmæssigt.

1. Fjern vandbeholderen, og træk filteret ud af apparatet.
2. Rengør filteret i varmt sæbenvand. Skyl og tør den grundigt, inden den udskiftes.
3. Monter filteret på plads igen.
4. Sæt vandtanken tilbage på apparatet.

Opbevaring

Hvis apparatet ikke bruges i længere perioder, skal du tømme vandbeholderen, når du har slukket og taget stikket ud af stikkontakten.

Rengør apparatets yderside. Rengør og udskift vandtanken.

Dæk apparatet for at beskytte det mod støv.

Opbevar apparatet lodret på et tørt, godt ventileret sted.

FEJLFINDING

Før du ringer til service, skal du kontrollere følgende elementer selv.

Problem	Hvad skal tjekkes
Apparatet fungerer ikke.	<ul style="list-style-type: none">• Kontroller, at apparatet er tilsluttet stikkontakten.• Kontroller, om vandtanken er fuld.• Kontroller, at vandtanken er korrekt monteret.• Kontroller, om apparatet ikke er tændt.
Affugtningskapacitet (fugtfjernelse) er lav.	<ul style="list-style-type: none">• Kontroller, at alle døre eller vinduer er lukket eller ikke åbnes for ofte.• Kontroller, at der ikke er nogen parafinvarmer eller anden enhed, der afgiver vanddamp i rummet.
Apparatet er støjende.	<ul style="list-style-type: none">• Kontroller, at filteret ikke er tilstoppet.• Kontroller, at apparatet ikke er vippet.• Kontroller, at gulvoverfladen, hvor apparatet er placeret, er stabilt og plant.
Der er spildt eller lækket vand.	<ul style="list-style-type: none">• Kontroller, at gummiproppen er indsat i drænudløbet, når du bruger tanken til at opsamle vand.• Kontroller, at slangens er korrekt tilsluttet drænudløbet, når du bruger det kontinuerlige udvendige dræningsanlæg.

SPECIFIKATIONER

Strømforsyning	220-240V~ 50Hz
Affugtningskapacitet	
(Under følgende testbetingelser: Den omgivende temperatur DB = 30 ° C, relativitetens fugtighed RH = 80 %)	10L / dag
(Under følgende testbetingelser: Den omgivende temperatur DB = 27 ° C, relativitetens fugtighed RH = 60 %)	5L / dag
Nominel indgangseffekt	200W (27 ° C 60 %)
Max. Indgangseffekt	245W (32 ° C 90 %)
Nominel indgangseffekt	1.25A (27 ° C 60 %)
Max. Indgangsstrøm	1.40A (32 ° C 90 %)
Vandtankkapacitet	2,2L
Lydtrykniveau	45dB (A)
Kølemiddel/ladning	R290 / 35g
Nettovægt	9 kg
Sugetryk på siden	1,2MPa
Udledningstryk på siden	2,5MPa



Læs instruktionerne.



Advarsel: Risiko for brand/brandfarlige materialer!



Brugervejledning; betjeningsvejledning



Serviceindikator; læs teknisk manual

BORTSKAFFELSE



Som en ansvarlig virksomhed er vi interesserede i miljøet.

Som sådan opfordrer vi dig til at følge den korrekte bortskaffelsesprocedure for apparatet og emballeringsmaterialerne. Dette vil hjælpe med at bevare naturressourcer og sikre, at de genanvendes på en måde, der beskytter sundheden og miljøet.

Du skal bortskaffe dette apparat og dets emballage i henhold til lokale love og forskrifter.

Da dette apparat indeholder elektroniske komponenter, skal apparatet og dets tilbehør bortskaffes separat fra husholdningsaffald, når apparatet når slutningen af sin levetid.

Kontakt din lokale myndighed for at lære om bortskaffelse og genbrug.

Apparatet bør tages til din lokale genbrugsplads. Nogle indsamlingssteder accepterer apparatet gratis.

Vi beklager enhver ulempe, der skyldes mindre uoverensstemmelser i disse instruktioner, som kan forekomme som et resultat af produktforbedring og -udvikling

Please read all instructions carefully before operating the appliance and keep this manual for future reference.

WARNINGS

This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

For the details concerning the method and frequency of cleaning, please see section "Cleaning and maintenance" on pages 8.

For disposal of the appliance:

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle the appliance responsibly to promote the sustainable reuse of material resources, the refrigerants and the flammable insulation blowing gases. The disposal should only be done through public collection points; contact the waste treatment center nearest your home for more details on the correct procedures for disposal.

For installation, servicing:

The appliance should be placed on a horizontal floor and keep the ventilation freely. Don't try to replace or repair any components by yourself, ask the service agency for help if necessary.

For handling:

Always handle the appliance to avoid any damage.


The quantity expressed in weight and in CO₂ of fluorinated greenhouse gases for which the appliance is designed, and the global warming potential of those gases is 3.

Fluorinated greenhouse gases are contained in hermetically sealed equipment.

The appliance contains fluorinated greenhouse gases.

Chemical name of the gas: R290

Allow at least 30 cm of space on the top and at the sides of the appliance for proper air circulation.

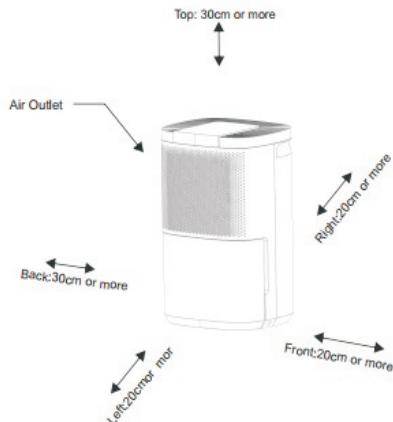


IMPORTANT SAFETY INSTRUCTIONS


- The dehumidifier is for indoor use only.
- Do not operate or store the dehumidifier in direct sunlight.
- Install your dehumidifier on a stable, level surface. Make sure the surface is strong enough to support the weight of the dehumidifier with a full water tank.
- Do not sit or stand on the dehumidifier.
- Turn off and disconnect the appliance from the mains socket when not in use and before cleaning.
- Do not place any object on the appliance.
- Do not drink or use the water collected in the water tank.
- Do not operate the appliance near flammable gas or combustibles, such as gasoline, benzene, thinner, etc.
- Do not remove the water tank during operation.
- Do not place aerosols or other hazardous materials in the vicinity. Also do not place inflammable materials such as petrol or thinner nearby. These may explode and cause fire.
- Do not place the appliance near a heat source. This may cause the plastic parts inside to melt and catch fire.
- Operate the appliance only on level, stable surfaces.
- Do not place any water container such as a vase on the appliance. Water spillage may cause insulation failure and electrical shock or fire.
- Do not stand or lean against the appliance. This may cause it to fall over, resulting in personal injury.
- Do not obstruct air intake or outlet with clothing or anything else. Obstruction of the airflow will cause overheating, malfunction or fire.
- Always empty the water tank before storing the appliance away.

OVERVIEW

Front View

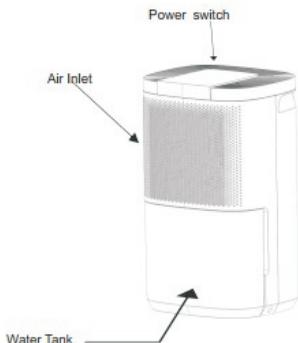

Back View

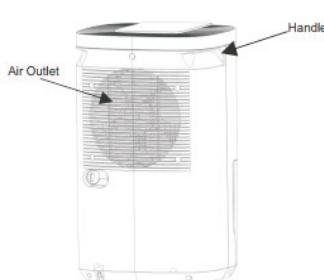

OPERATION

- The appliance is suitable for use in ambient temperature of 5°C to 32°C.
- Make sure the water tank is correctly fitted.
- Do not connect the appliance to a multiple socket outlet.

NOTE: Always be careful when moving the appliance, especially as water gets higher in the tank; the higher the water gets in the tank, the easier it is for the appliance to fall over when being moved. It is recommended to empty the tank before moving the appliance.

Control Panel



Buttons:



Power on/off



Dehumidifying mode setting



Fan speed setting



Timer on / Timer off functions



Child lock function



Fan on/off function



Sleep function

Indicator lights:



Timer on/
Timer off



Relative
humidity
percentage
level
display



Anti-frost
function



Tank full
or not in
place



Low fan
speed



High fan
speed

Dehumidifying mode:



Normal



Continuous



Strong



Laundry dryer



Display: To show the relative humidity percentage level, the delayed start or delayed stop time.

Power On and Off

1. Plug the appliance into the mains socket.



2. Press to turn on the appliance.

- The red indicator light on the button will illuminate.
- The display will show the ambient humidity level.



3. To turn off the appliance, press again.



- The red indicator light on the button will go out and there is no display.

Setting the Dehumidifying Mode



Repeatedly press to select the desired dehumidifying mode.

- The corresponding indicator light will flash about 5 seconds and then stop flashing, indicating that the selected dehumidifying mode is confirmed.



Normal



Continuous



Strong



Laundry dryer



If selecting the laundry dryer mode, the indicator light will illuminate.

The fan speed is fixed and cannot be adjusted. The humidity level will be automatically controlled according to the ambient humidity.

Tips for drying wet cloths:

- Allow a 30-50 cm gap between the air outlet and any clothing.
- To allow good airflow, line the wet clothes up and leave space between each garment.
- Hang wet thick clothing directly in front of the air outlet. The optimal drying performance may not be obtained for thick and heavy clothing.



Setting the Humidity Level

In normal dehumidifying mode, repeatedly press "+" "-" to set the required humidity level. The humidity level can be set within a range of 30% to 80%.

- For drier air, set the humidity level for a lower percentage value.
- For damper air, set the humidity level for a higher percent value.

Each time you press "+" the humidity level will be increased by 5%. After you have set the desired humidity level, the display will briefly show the set humidity level and then return to actual ambient humidity level.

Check the color of the statut indicator light:

Ambient humidity level	Status indicator light
< 50%	Blue
Between 50% and 70%	Green
> 70%	Red

Status indicator light



Setting the Fan Speed

In normal dehumidifying and air purification modes, repeatedly press to select the desired fan speed. The corresponding indicator light will illuminate.



Setting the Timer

To program the delayed start function:

1. When the appliance is in the standby state, press .
 - The indicator light  and "00" will flash on the display.
2. While "00" is flashing, repeatedly press or press & hold "+" "-" to set the desired hours.
 - The delayed start time will be changed by 1-hour increments up to 24 hours.
3. After about 5 seconds the set time will be confirmed.
4. When the set time has elapsed, the appliance will start working.

To program the delayed stop function:

1. When the appliance is working, press 
 - The indicator light  and "00" will flash on the display.
2. While "00" is displaying, repeatedly press "+" "-" to set the desired hours.
 - The delayed stop time will be changed by 1-hour increments up to 24 hours.
3. After about 5 seconds the set time will be confirmed.
4. When the set time has elapsed, the appliance will stop working.

To modify or cancel the timer:

- If you wish to modify the set delayed start or stop time, press  once and then while the hour is flashing, repeatedly
Press "+" "-" until the desired time is selected.
- If you wish to cancel the timer, press  two times, the display shows "00". After about 5 seconds, the indicator light  will go out.

Child Lock

1. To activate the child lock function, press and hold  for about 3-5 seconds and the indicator light on this button  will illuminate.
 - All buttons will be disabled.
2. To deactivate this function, press and hold  for about 3 seconds and the indicator light on this button  will go out.

Fan on/off Function

1. Press  to activate the fan on/off function and the indicator light on this button  will illuminate.
 - You can set the fan speed and timer when activating this function, the appliance will exit from the dehumidifying mode.
2. To deactivate this function, press  and the indicator light on this button  will go out.

Sleep Function

1. Press  to activate the sleep function.
 - The indicator light on this button  will illuminate but the other illuminated indicator lights will go out. There will be no display.
 - The indicator light  will remain illuminated if water tank is full.

- Press any button to wake up the display and indicator lights. After about 5 seconds, they will enter a sleep state again.

2. To activate this function, press  and the indicator light on this button  will go out.

- The humidity level will be displayed and indicator lights will illuminate.

Defrosting Function

The appliance will defrost automatically when the ambient temperature falls below about 18°C.

The defrosting device will start up and operate for a period of 5 minutes every 25 minutes.

- During defrosting, the dehumidifying and air purification functions may intermit.
- Do not switch off and unplug the appliance from the mains socket when the appliance is defrosting.

REMOVING COLLECTED WATER

Emptying the water tank:



When the water tank is full, the indicator light  will illuminate.

The status indicator light will flash red whilst you will hear beeps.


1. Slowly pull out the water tank.
 - Hold the appliance firmly and pull out the tank by the handles on both sides of the tank, being careful not to spill any water.
2. Pour out the water.
3. Push the water tank gently all the way in.
 - Failing to push the tank securely may cause the appliance to stop operating.
4. When the tank is put back, the appliance will start operating. The indicator light  will go out.
 - The status indicator light will restore to the previous colour and the beeping will stop.

NOTE: Never drink the water or use it to water plant.

Continuous drainage:

If the appliance is to be operated for long periods but you are unable to empty the tank, it is recommended to use the continuous drain facility.

1. Remove the rubber plug.
2. Fasten the supplied hose to the drain outlet.
 - Make sure that the hose is not higher than the outlet, otherwise water will remain in the tank. Also check that the hose is not kinked.

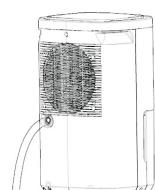

NOTE: When the continuous drain facility is not being used, remove the hose from the outlet and attach the rubber plug back to the drain outlet.

Continuous Drain Hose (Annex gift)

Length: 30cm

Inner Diameter: 17mm

Outer Diameter: 19mm



CLEANING AND MAINTENANCE

- Turn off and unplug the appliance from the mains socket before performing any cleaning or maintenance operation.
- Never immerse the appliance in water.
- Clean the outside of the appliance with a slightly damp cloth. Dry thoroughly.
- Clean the water tank under running water after emptying it.
- Do not use any chemical or abrasive cleaning agent.

Cleaning the filter

Regularly clean the filter.

1. Remove the water tank and pull the filter out of the appliance.
2. Clean the filter in warm soapy water. Rinse and dry it thoroughly before replacing it.
3. Fit the filter back in place.
4. Attach the water tank back to the appliance.

Storage

If the appliance is not used for long periods, after turning off and unplugging the appliance from the mains socket, empty the water tank.

Clean the outside of the appliance. Clean and replace the water tank.

Cover the appliance to protect it from dust.

Store the appliance upright in a dry, well-ventilated place.

TROUBLESHOOTING

Before calling for service, check the following items yourself.

Problem	What to check
The appliance does not operate.	<ul style="list-style-type: none">• Check that the appliance is plugged into the mains socket.• Check if the water tank is full.• Check that the water tank is correctly fitted.• Check if the appliance is not turned on.
Dehumidifying capacity (moisture removal) is low.	<ul style="list-style-type: none">• Check that all doors or windows are closed or not opened too often.• Check that there is no kerosene heater or other device giving off water vapour in the room.
The appliance is noisy.	<ul style="list-style-type: none">• Check that the filter is not clogged.• Check that the appliance is not tilted.• Check that the floor surface where the appliance is placed is stable and level.
Water is leaked or spilled.	<ul style="list-style-type: none">• Check that the rubber plug is inserted into the drain outlet when using the tank to collect water.• Check that the hose is connected properly to the drain outlet when using the continuous external draining facility.

SPECIFICATIONS

Power Supply	220-240V~ 50Hz
Dehumidifying Capacity (Under the following test conditions: The ambient temperature DB=30°C, the relativity humidity RH=80%)	10L / Day
(Under the following test conditions: The ambient temperature DB=27°C, the relativity humidity RH=60%)	5L / Day
Rated Input Power	200W (27°C 60%)
Max. Input Power	245W (32°C 90%)
Rated Input Current	1.25A (27°C 60%)
Max. Input Current	1.40A(32°C 90%)
Water Tank Capacity	2.2L
Sound Pressure Level	45dB (A)
Refrigerant/Charge	R290 / 35g
Net Weight	9kg
Suction Side Pressure	1.2MPa
Discharge Side Pressure	2.5MPa



Read the instructions.



Warning: Risk of fire/Flammable materials!



Operator's manual; operating instructions



Service indicator; read technical manual

DISPOSAL



As a responsible company we care about the environment.

As such we urge you to follow the correct disposal procedure for the appliance and packaging materials. This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this appliance and its packaging according to local laws and regulations.

Because this appliance contains electronic components, the appliance and its accessories must be disposed of separately from household waste when the appliance reaches its end of life.

Contact your local authority to learn about disposal and recycling.

The appliance should be taken to your local collection point for recycling. Some collection points accept appliance free of charge.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development

EC DECLARATION OF CONFORMITY EF OVERRENSSTEMMELSESERKLÆRING

Manufacturer/EU-Importer – Fabrikant/EU Importør
Silvan a/s, CVR-nr: DK 38 84 12 97
Address – Adresse: Edwin Rahrs Vej 88 8220 Brabrand ,Denmark

Hereby declares that the following product - Erklærer herved at følgende produkt:

Product name:Dehumidifier,Commercial name: Dehumidifier 10L, Function: Dehumidifying, Model: 9846961
Type: Electric powered

complies with the following directives – er i overensstemmelse med følgendedirektiver:

LVD 2014/35/EU , EMC 2014/30/EU

RoHS 2011/65/EU, WEEE 2012/19/EU

With amendments as these directives are implemented in national legislation
Med ændringer på grundlag af disses direktivs implementering i national lovgivning
Standards and technical specification referred to:
Anvendte standarder og tekniske specifikationer:

EN 60335-2-40:2003/A13:2012

EN 60335-1:2012/A13:2017

EN 62233: 2008

EN55014-1 :2017

EN 55014-2: 2015

EN 61000-3-2: 2014

EN 61000-3-3: 2013

Person authorised to compile the technical file andmaking this declaration:

Place – Sted

Århus, Denmark

Date - Dato – Datum - Päiväys:

FEB.2020



Signature - Underskriver:

Rene Drewsen, Head of purchasing

Address–Adresse: Edwin Rahrs Vej 88 8220
Brabrand ,Denmark



Bright is a trademark belonging to Silvan a/s.

No part of this userguide may be reproduced in any form
or by any means without written permission from Silvan a/s.

All rights reserved.

Bright er et varemærke tilhørende Silvan a/s.

Ingen dele af denne betjeningsvejledning må gengives under nogen form
eller på nogen måde uden skriftlig tilladelse fra Silvan a/s.
Alle rettigheder forbeholdes.