





 







IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

Assembly Instructions

A		1PC
B		1PC
C		1PC
D		1PCS
E		1PCS
F		1PCS
G	 M10*60	2 PCS
H	 M10*55	2 PCS
I		1 PC
J		1 PC
K		1 PC

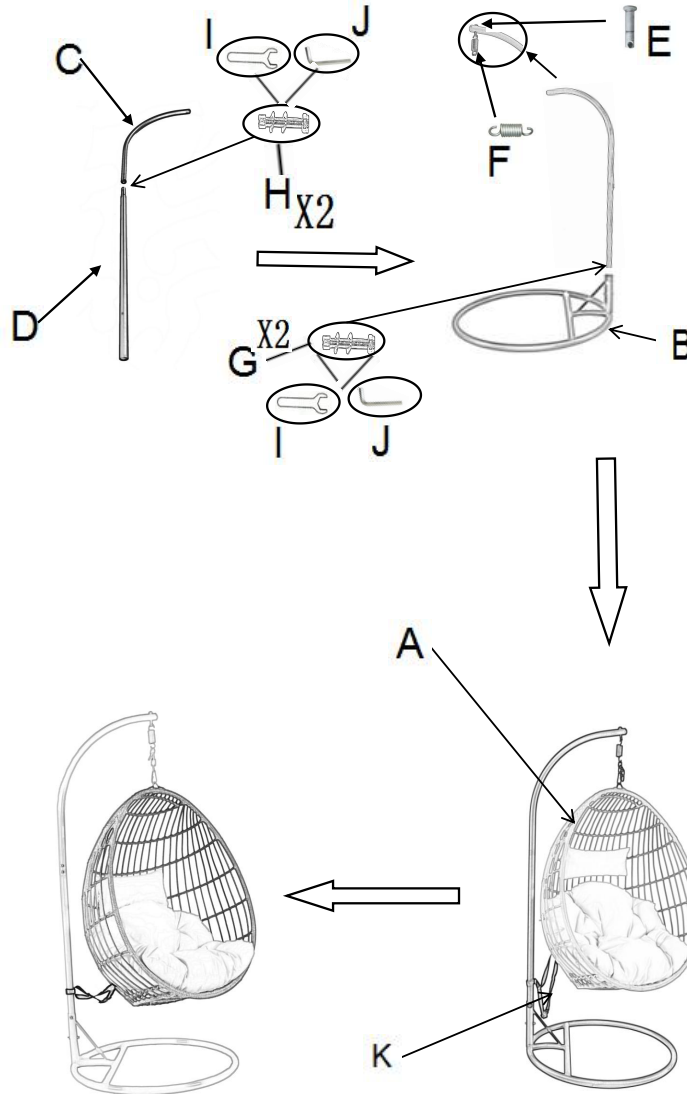

IMPORTANT & WARNINGS:

- . Remove all parts from packaging carefully.
- . This is a heavy unit!! When assembling and unassembling we recommend that 2 or more adults are involved.
- . Keep children & Pets away when assembling or unassembling.
- . Do not climb on the frame
- . This product is not a toy and should NOT be used as a swing under any circumstances as this could result in injury.
- . Max recommended weight is 120Kgs/ 250Lbs.
- . This product is only designed to seat 1 person at any given time. DO NOT exceed this as this could damage the product and cause injury; and void your warranty.
- . Keep all flame and heat sources well away from this product at all times.
- . Take care not to trap fingers whilst assembling and unassembling.
- . When not in use please store away in a cool and dry place away from any heat source.