
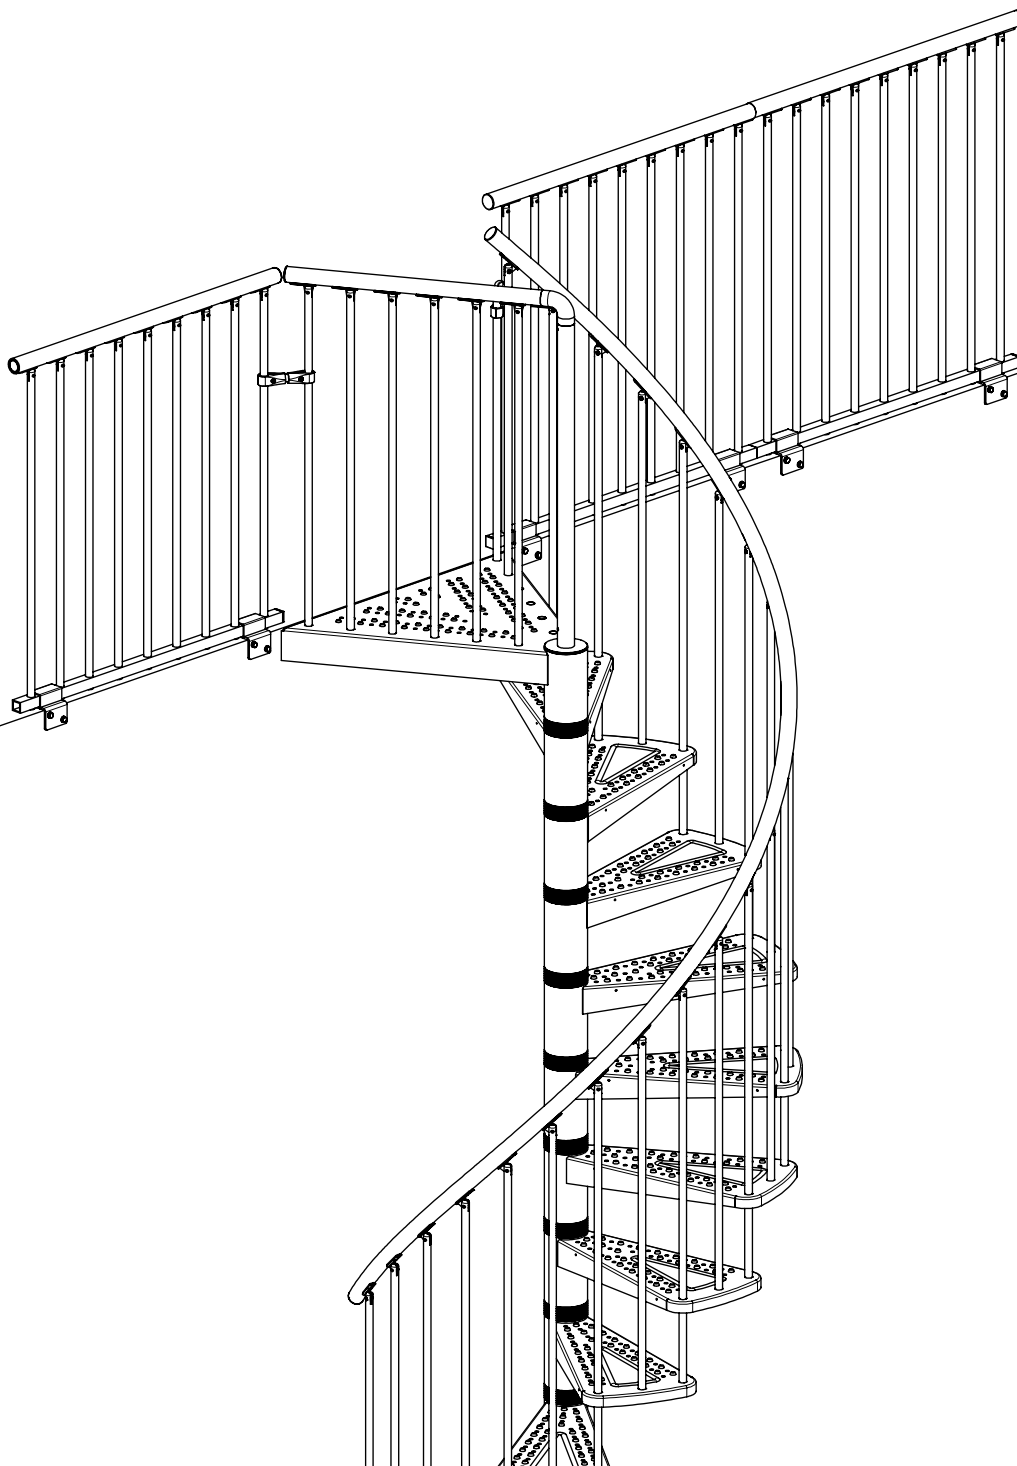
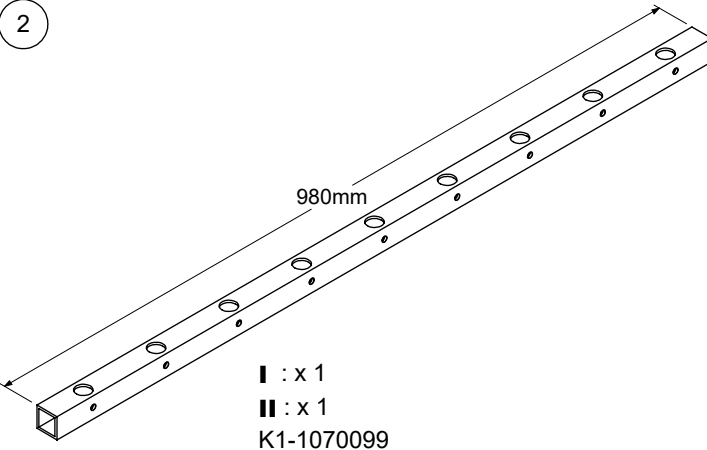


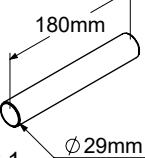




TORONTO / GARDENSPIN




Balcony banister Brüstungsgeländer




Installation instruction
Montageanleitung


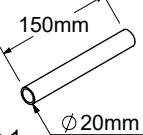




I II	Startkit Extension kit	Kit de départ Kit de suite	Startpaket Extrapaket	Startpakke Fortsætterpakke	
1  I : x 9 II : x 9 K1-1070070	2  980mm I : x 1 II : x 1 K1-1070099	7  Ø 42mm I : x 1 II : x 1 K2-71943 1000mm	3  I : x 2 II : x 2 K2-1070110 5  I : x 9 II : x 9 K1-1070100	4  I : x 2 K1-30021 6  I : x 1 K2-1070111	8  I : x 2 K1-71936 9  180mm Ø 29mm II : x 1 K1-71276 10  I : x 2 K2-1070095 11  150mm Ø 20mm I : x 1 K1-1070072
20  I : x 6 II : x 4 K3-06068 Ø8 x 60	21  I : x 6 II : x 4 K3-04041 Ø8	22  I : x 6 II : x 4 K3-08004 Ø8	23  I : x 15 II : x 13 K3-05020 M8 x 8	24  I : x 9 II : x 9 K3-02005 M5 x 20	25  I : x 18 II : x 18 K3-06346 Ø5 x 16 - TX25

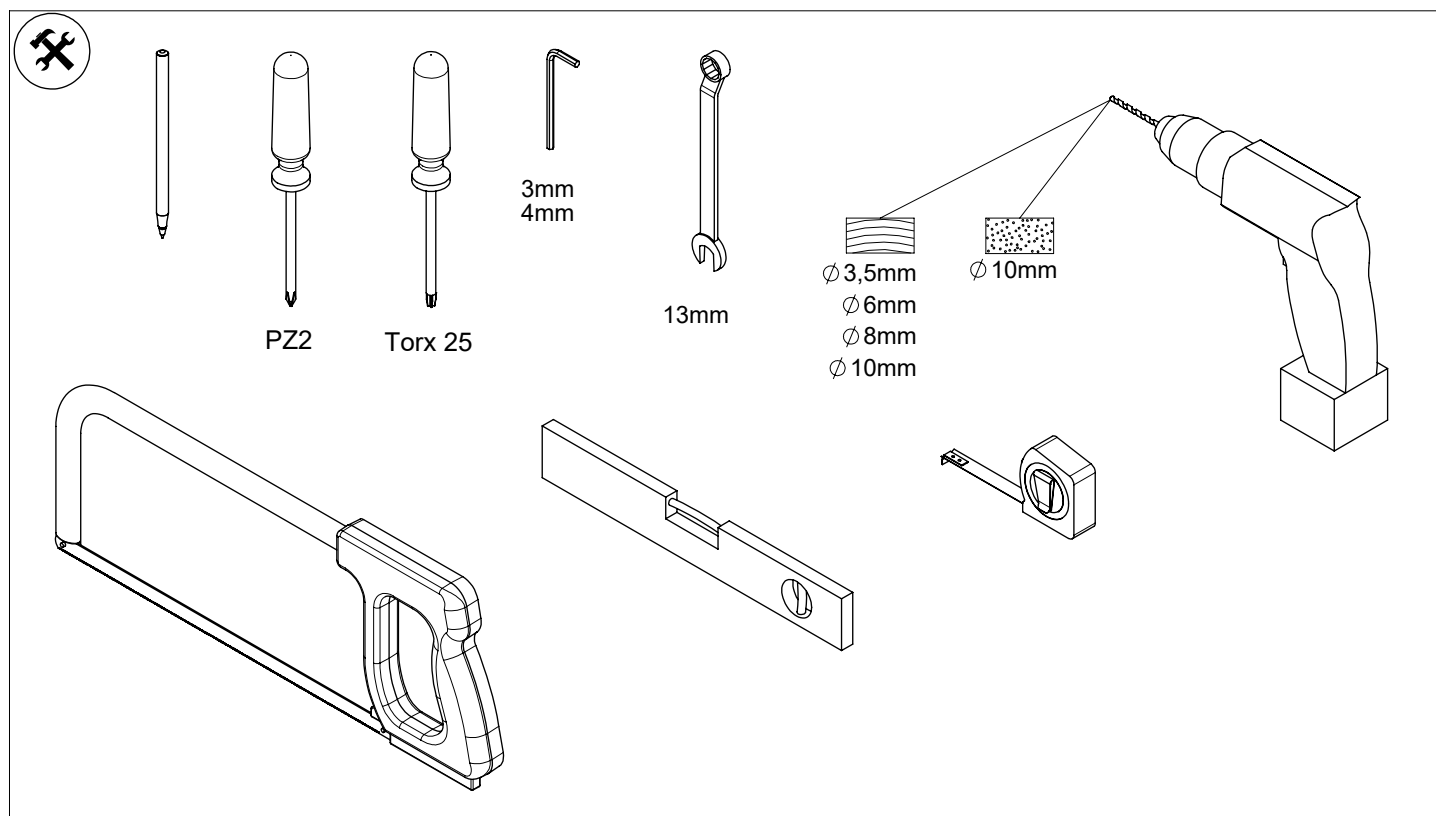

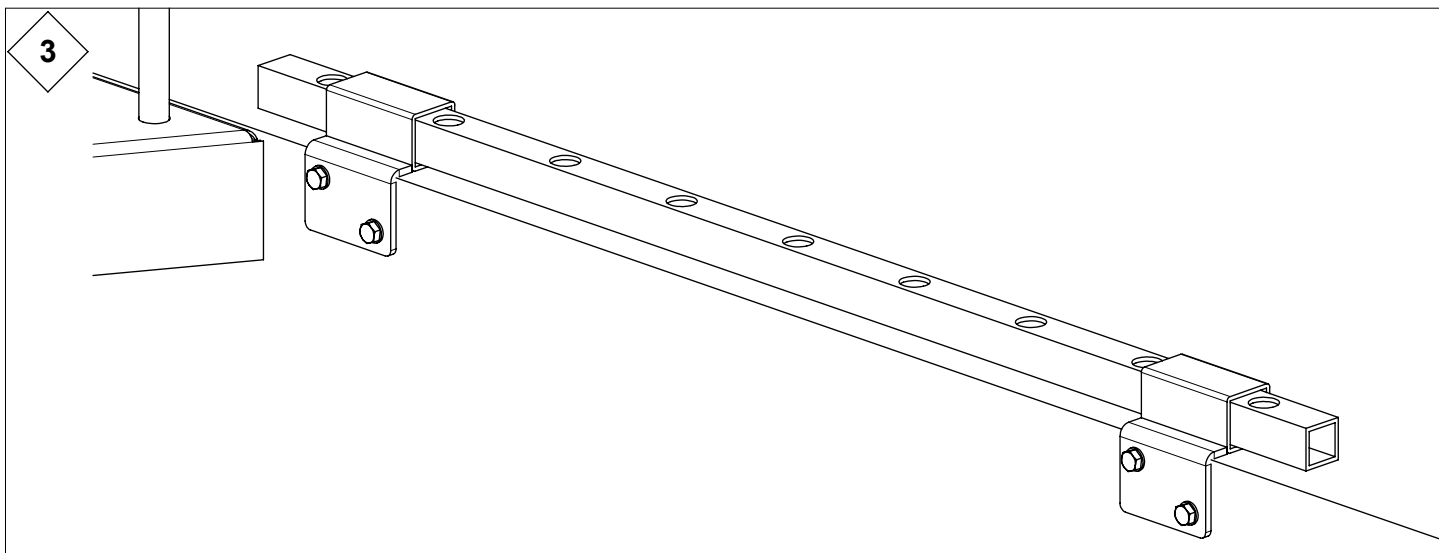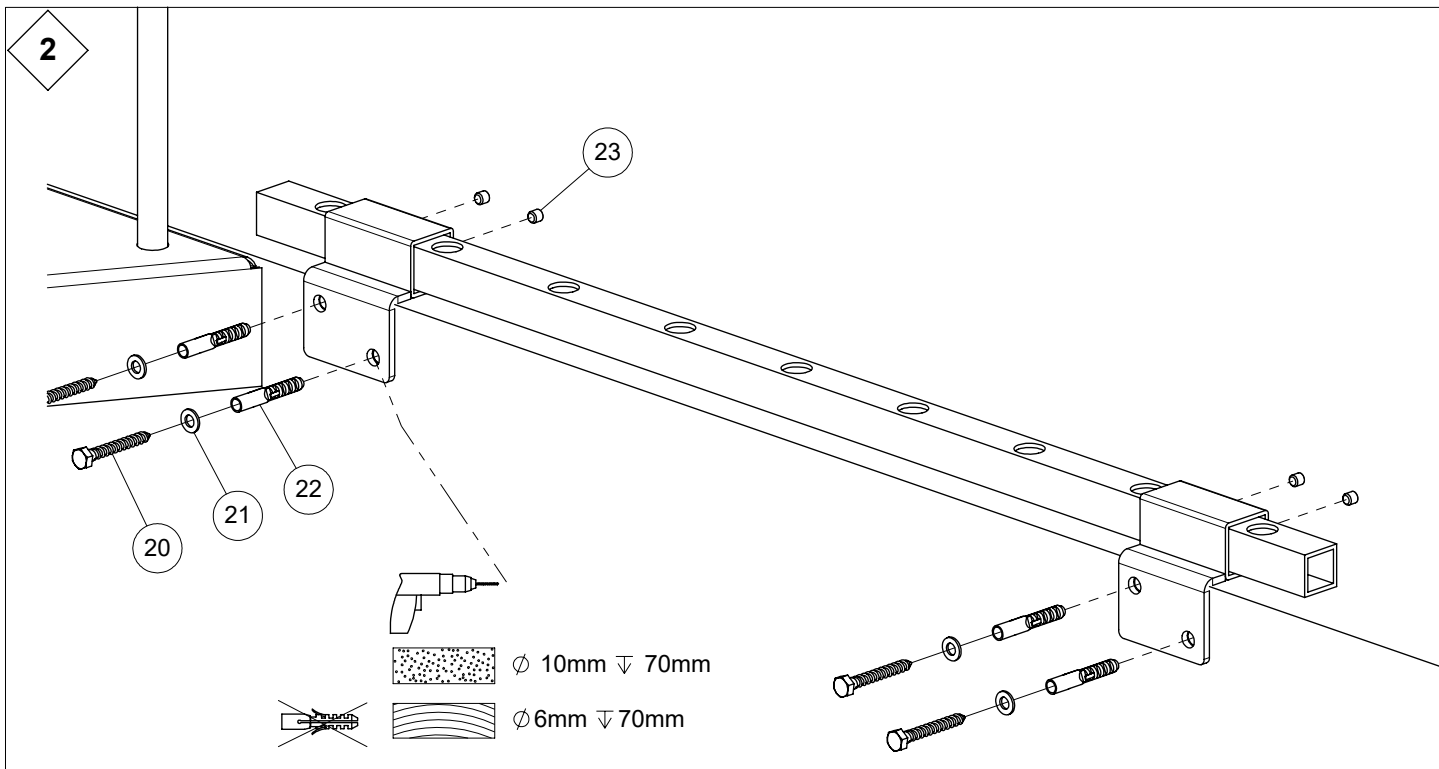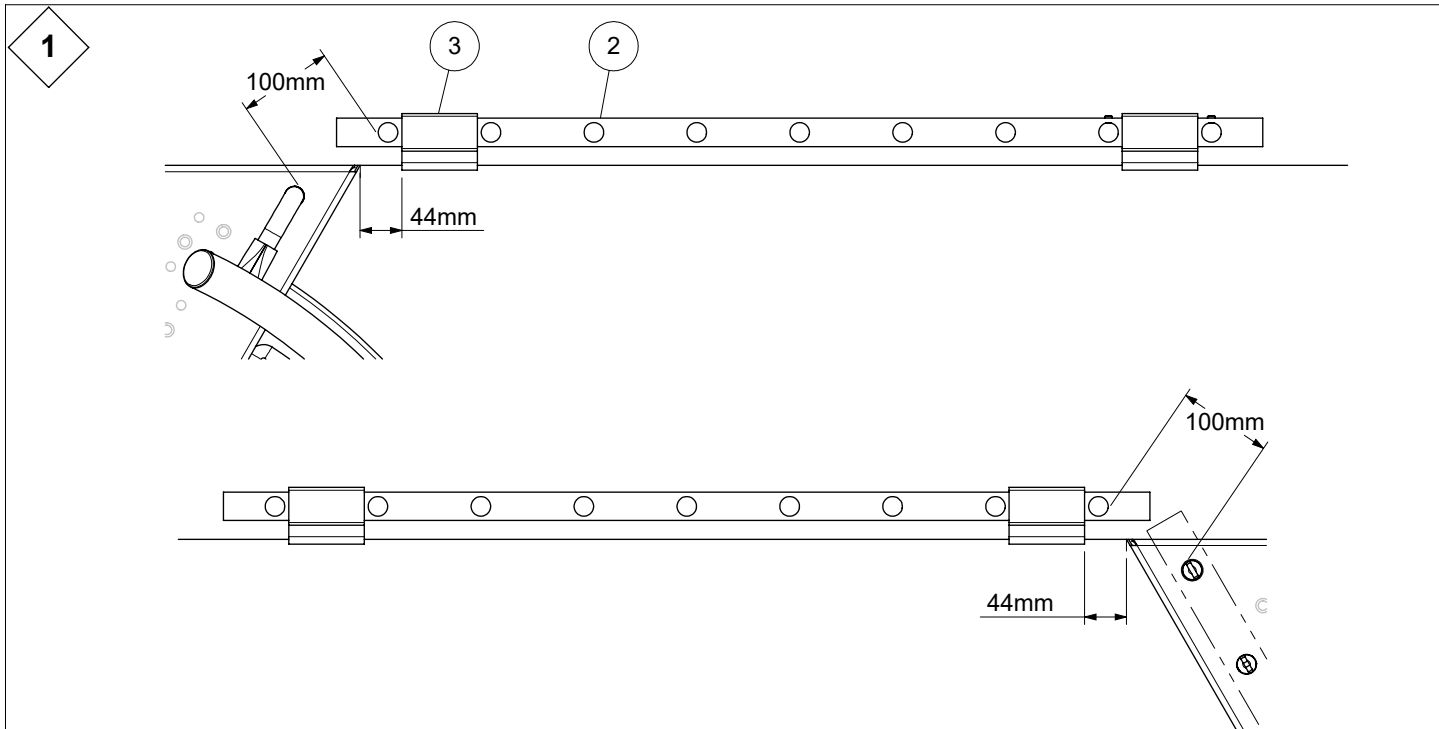


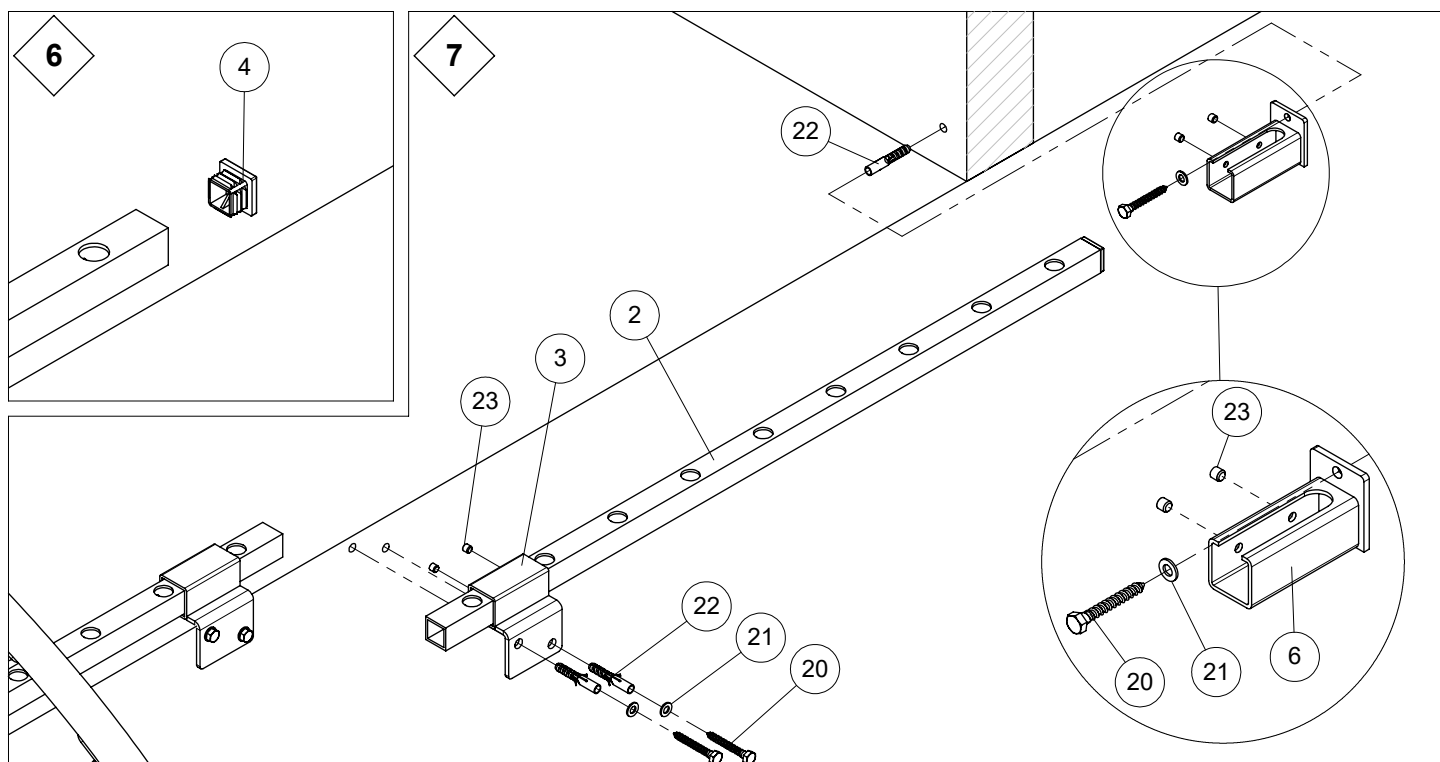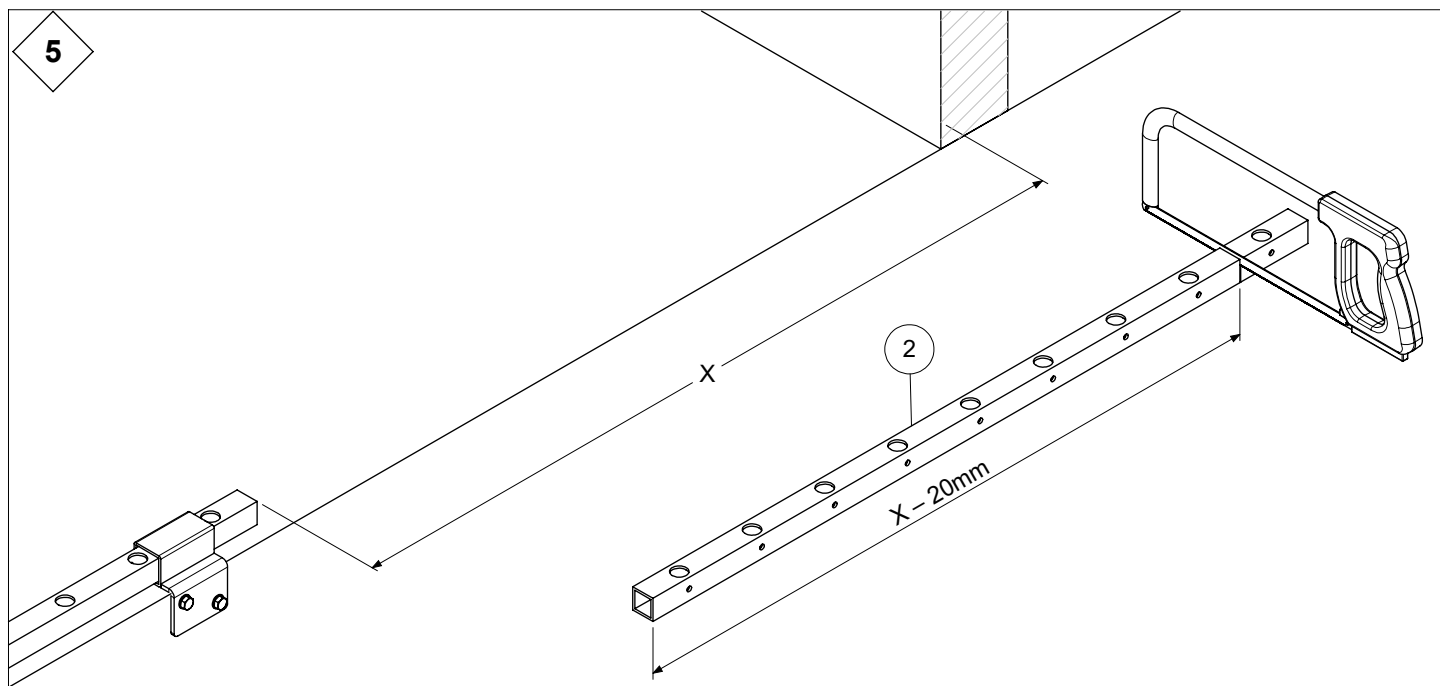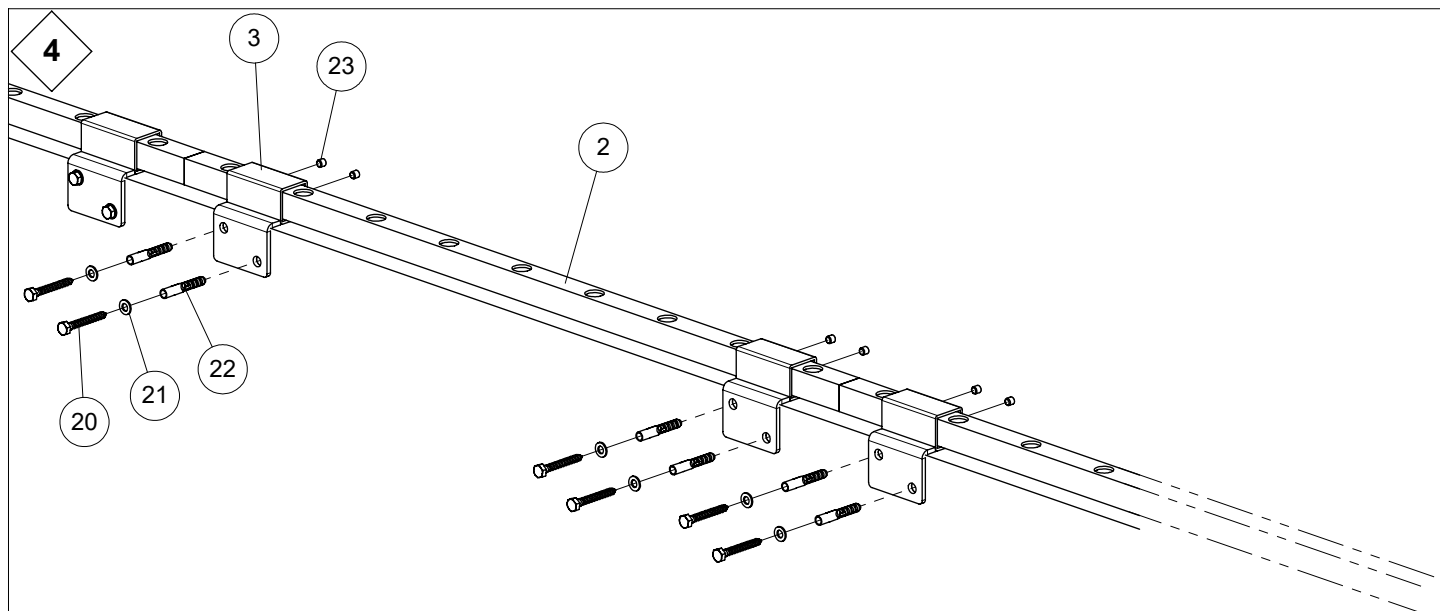

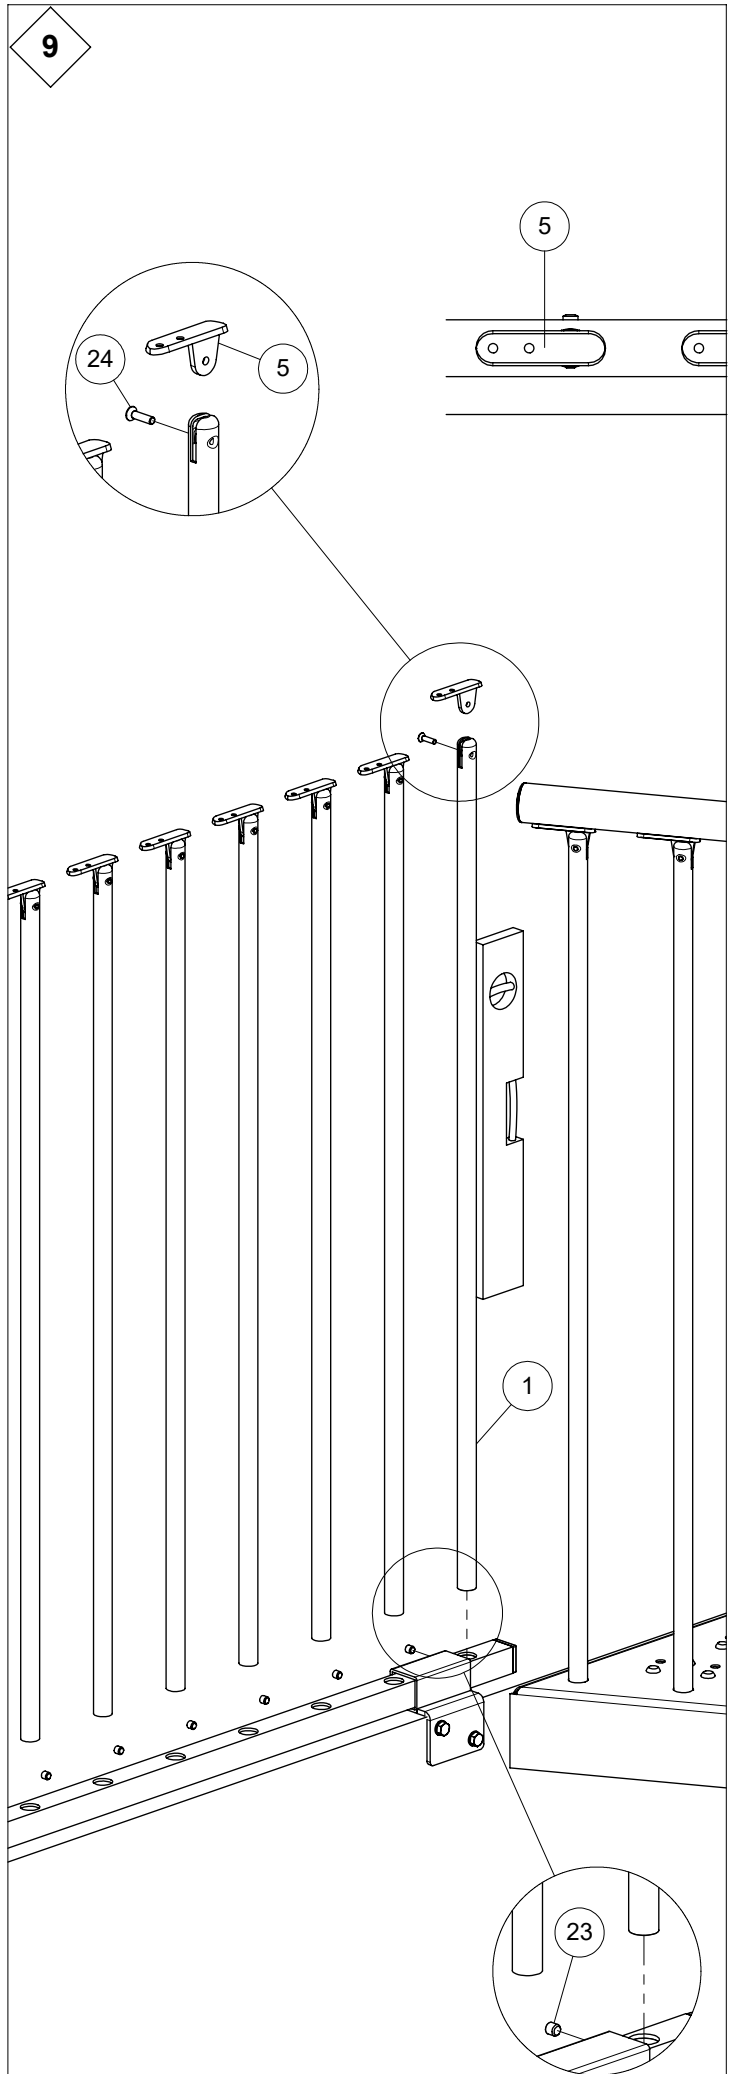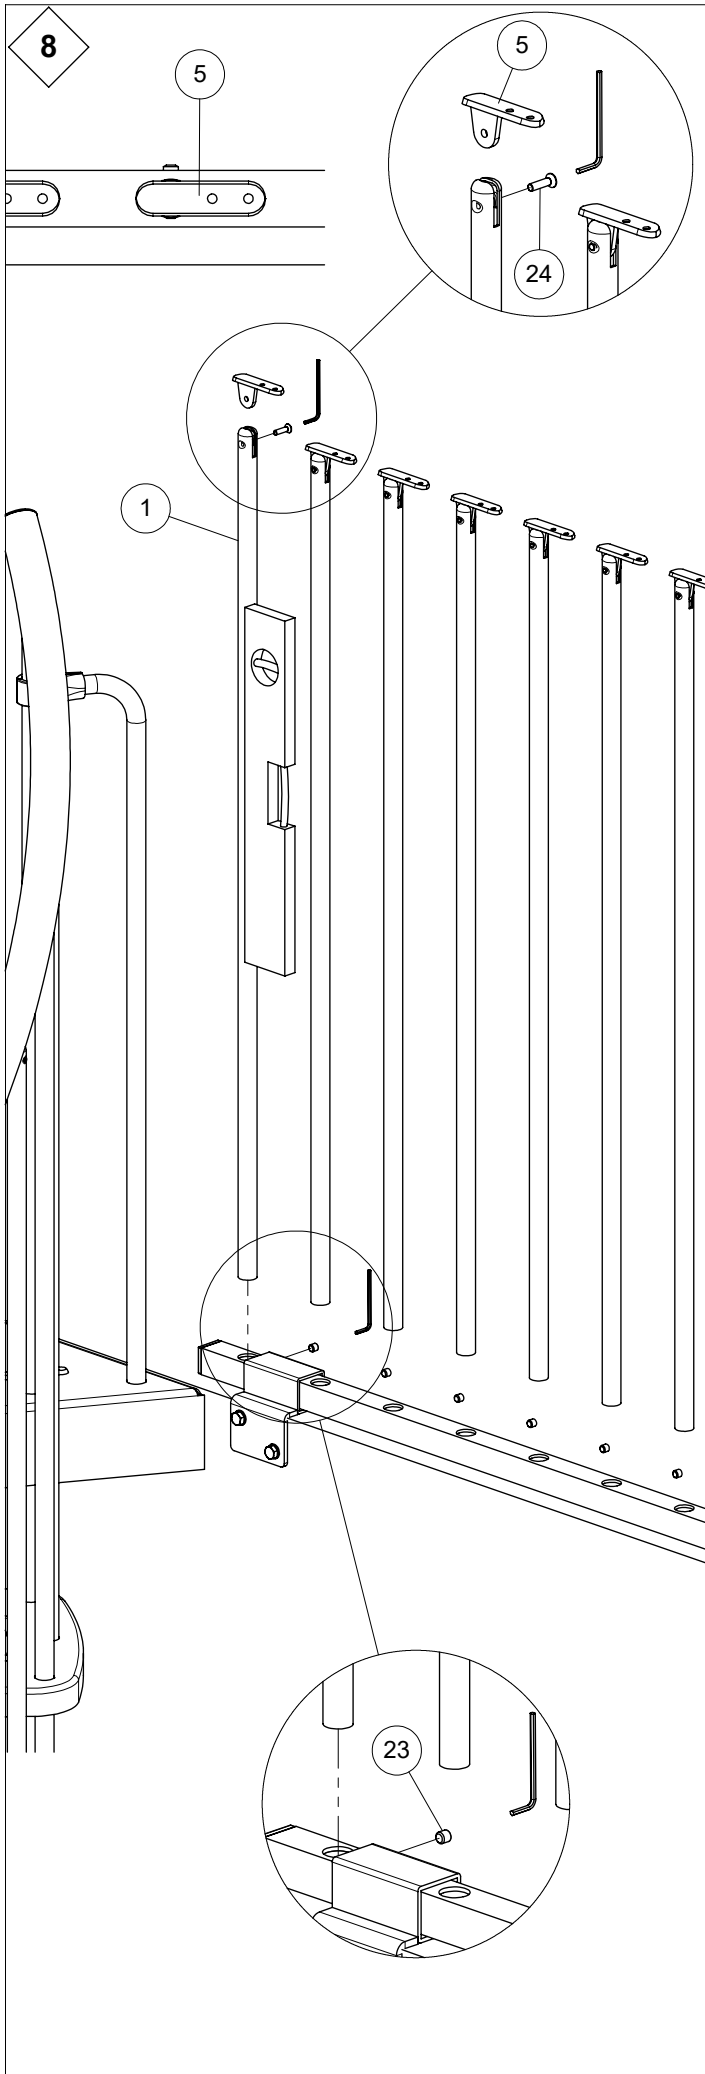


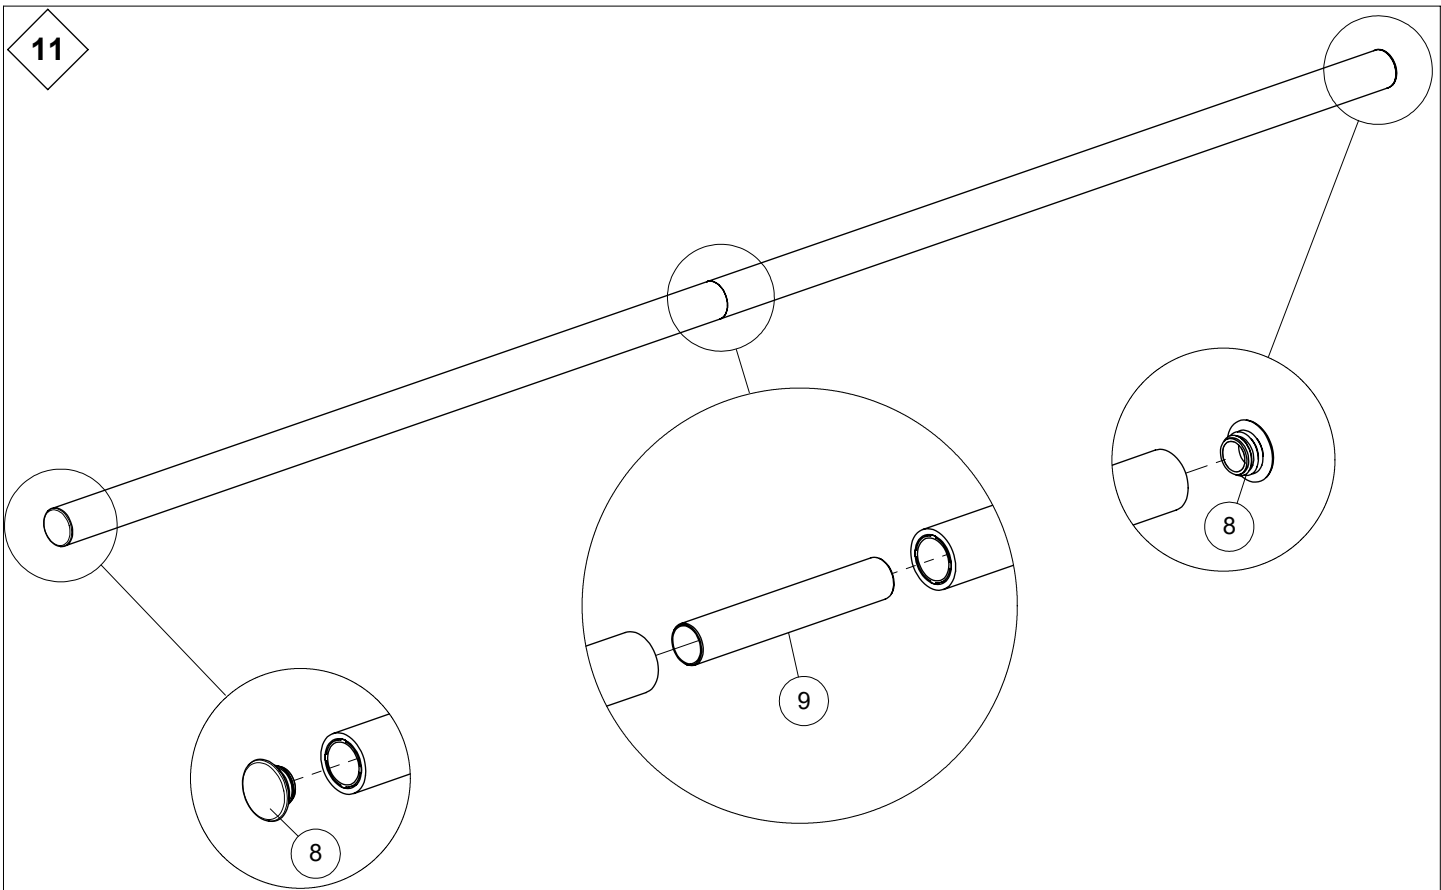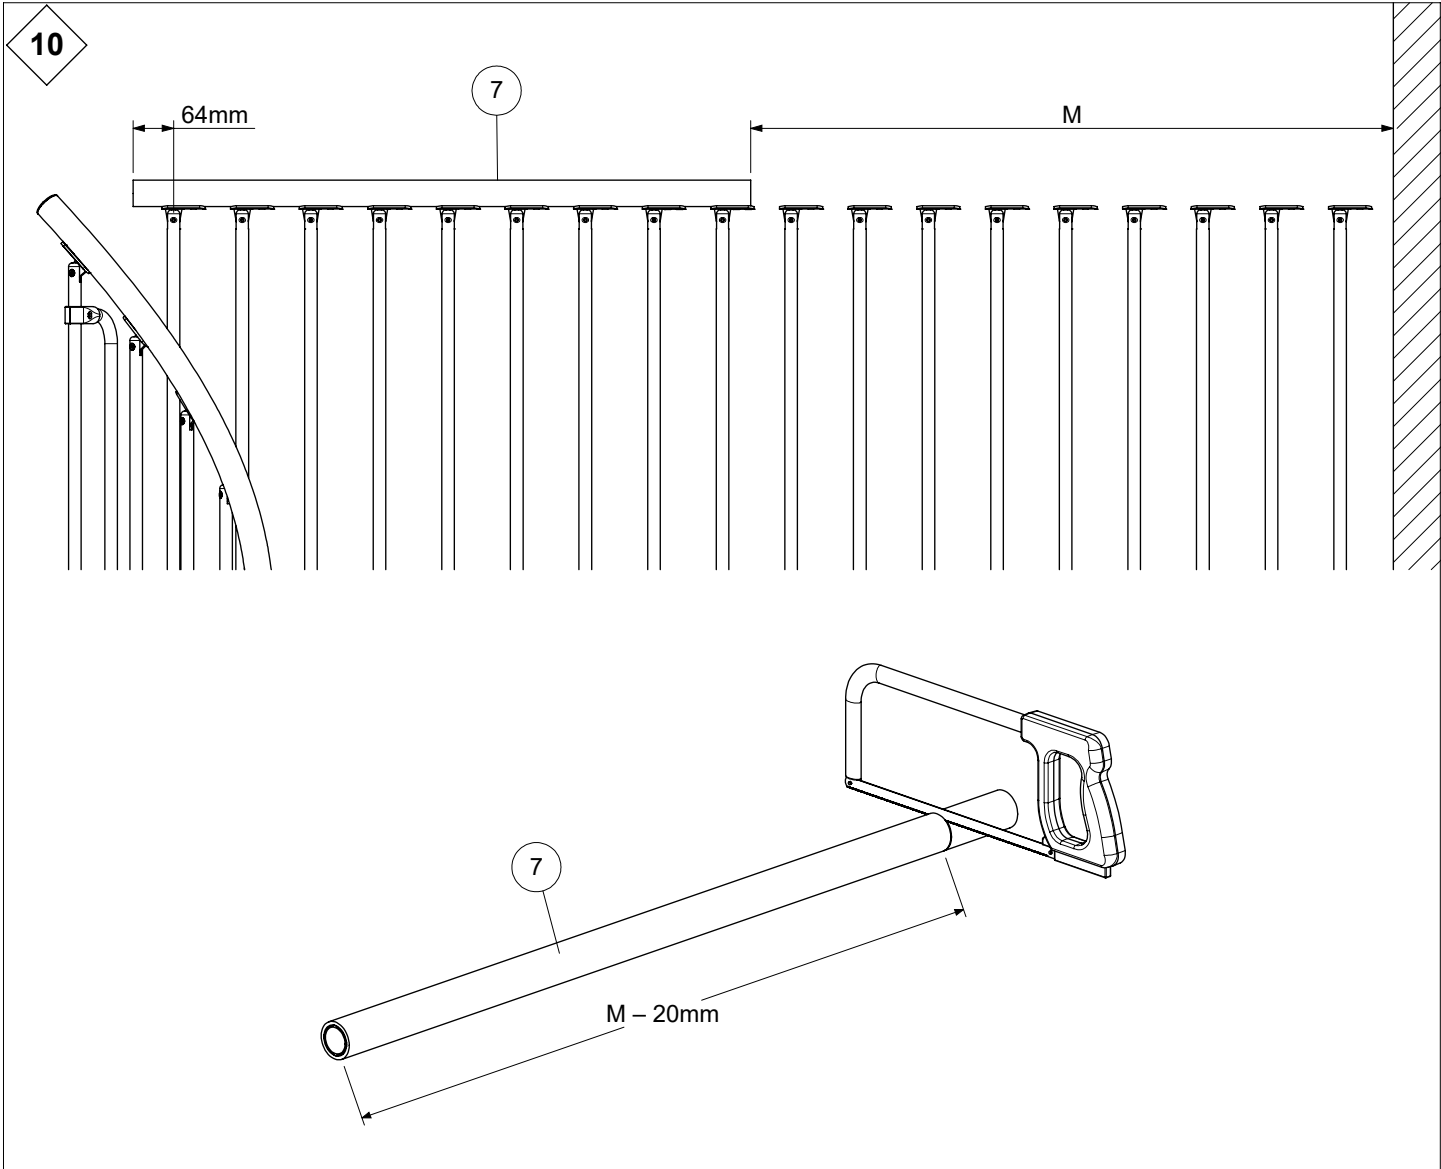


12

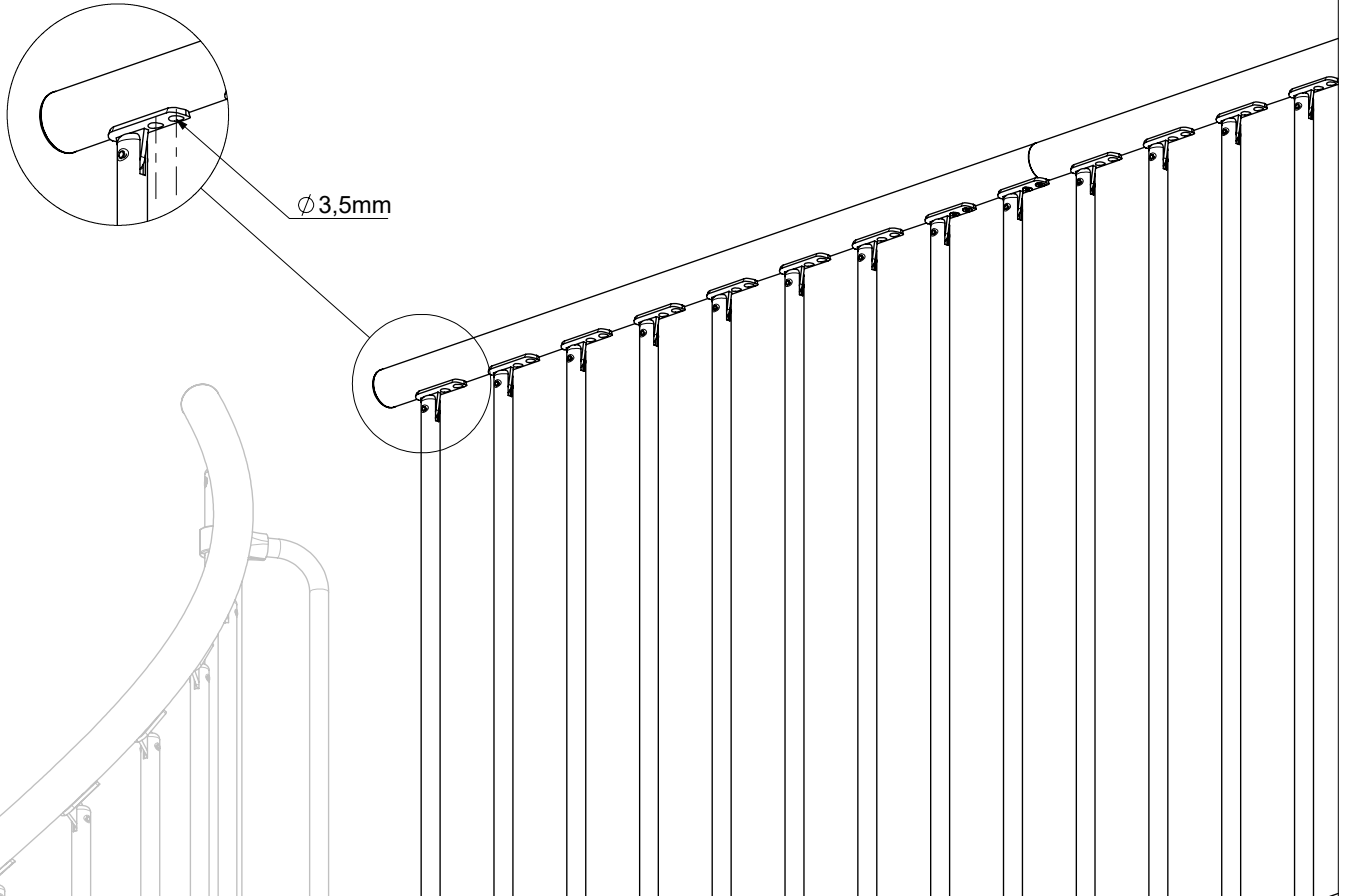


13

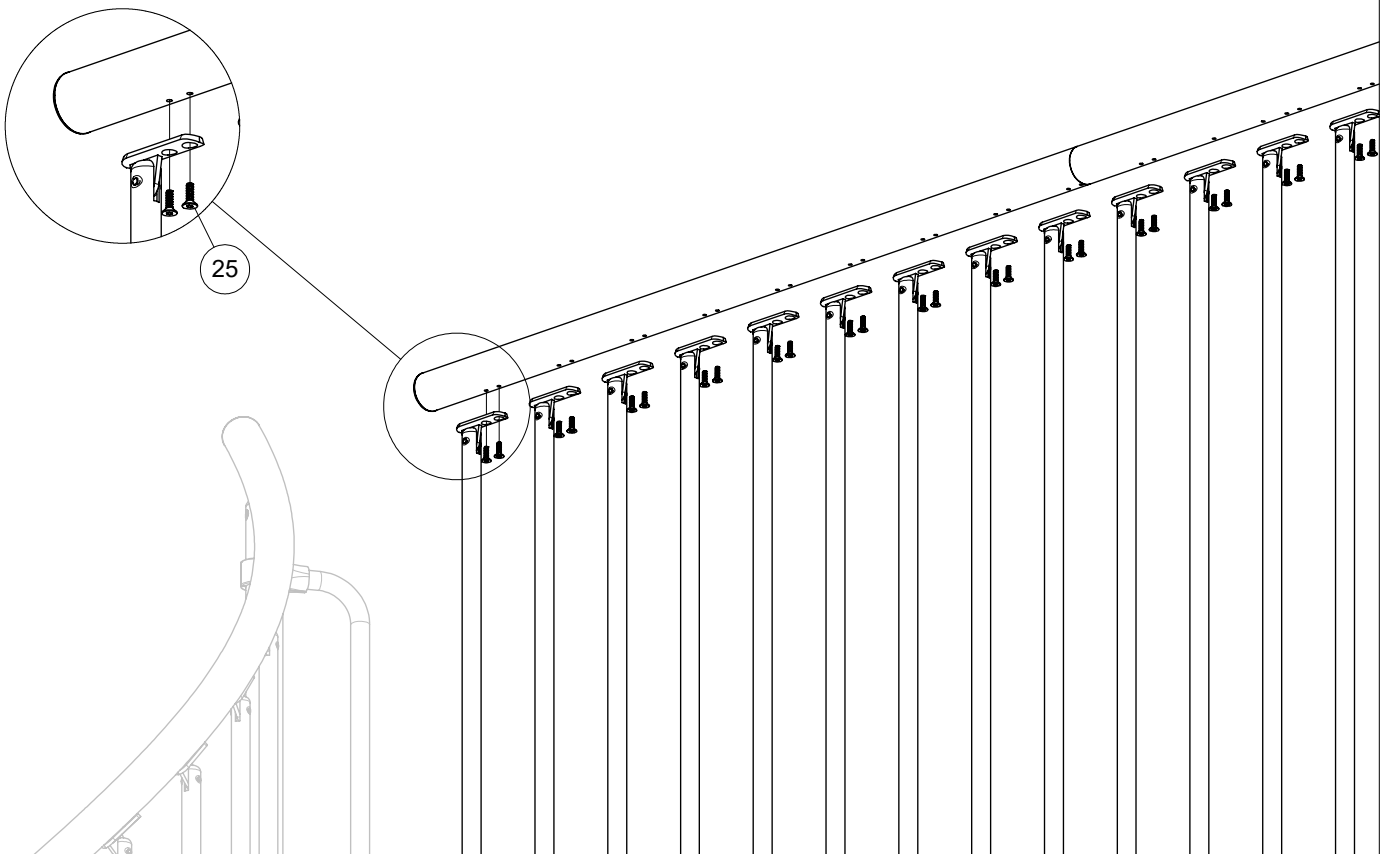

14

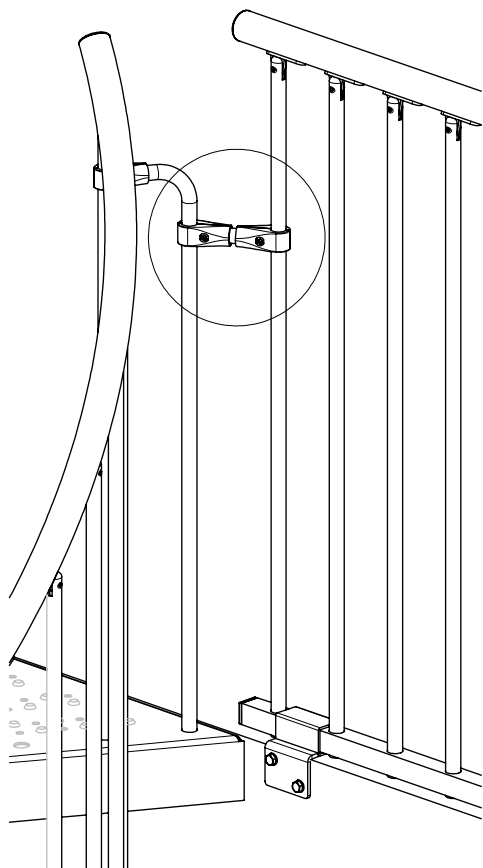

15

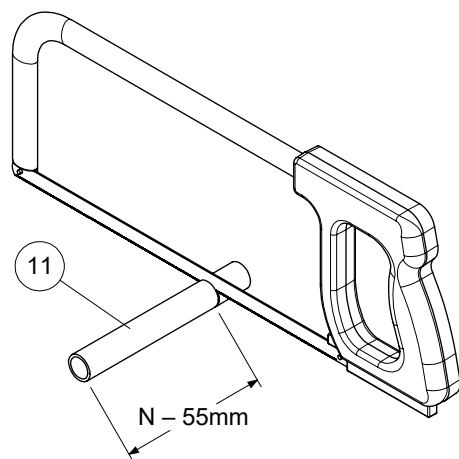

16

